

Dirac Live Quickstart

Contents

These instructions

USB mic & USB cable

Initial Setup

OPTION1 - Connect the USB mic using the supplied cable to a free USB port on your PC/MAC



OPTION 2 - If you have a 3rd party mic, such as the XTZ Pro mic, or miniDSP UMIK-1, connect as per the manufacturers instructions.

For PC users, check that the AGC setting is OFF (e.g. in Windows 7, Start > Control Panel > Hardware and Sound > Manage Audio Devices > Recording > Microphone > Properties > Custom > AGC is unticked) and the level is set to max (e.g. in Windows 7, Start > Control Panel > Hardware and Sound > Manage Audio Devices > Recording > Microphone > Properties > Levels > 100) .



Getting Started With Dirac Live

To download the Dirac Live PC/MAC application, go to :

<https://live.dirac.com>

Download and install the Dirac Live application on your PC/MAC

Within the AVR setup menu, set which speakers are connected (Dirac Live does NOT autodetect connected speakers).

Ensure that the AVR is connected to the same network as your PC/MAC and the AVR control is set to IP (in the General Setup menu).

Start the Dirac Live application

It is important to select the correct USB microphone and also load the microphone calibration file within the Dirac Live application, for the supplied USB mic, use the **AVRMicCal.txt** calibration file. If you have a 3rd party mic, ensure that is selected and the correct calibration file is used.